


ASSEMBLY INSTRUCTION


NF2C-B/2 | Profi® the Professional Phono Plug





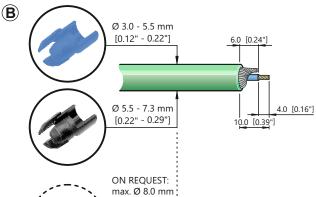

[0.31"] Order CNF-9

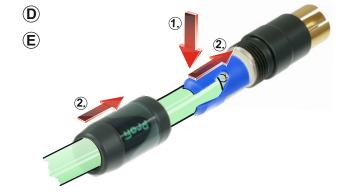

- A Slide the boot onto the cable.
- (B) Prepare cable as shown.
- © Solder the wire ends.
- (D) Put chuck onto the cable.

Attention:

Blue or black chuck for two range of cable diameter.

(White chuck on request: For max. 8 mm available.)

(E) Slide insert and chuck together to the housing.

Attention: Pay attention to the guiding key.

F Finish the installation by tighten the bushing onto the connector.

SCOPE OF DELIVERY - NF2C-B/2

- 1 x Phono Plug marked red
- 1 x Phono Plug marked black
- 2 x Strain reliefs for cable O.D. 3.0 5.5 mm
- 2 x Strain reliefs for cable O.D. 5.5 7.3 mm





Draft. Nr.: BDA 236 V3 Update: 2023-01-25

Neutrik AG | LI-9494 Schaan

www.neutrik.com

